


GARMIN®

GPSMAP® 9000XSV SERIES

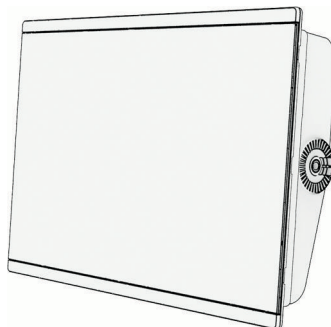

Installation Instructions

Getting Started

Important Safety Information

WARNING

Failure to follow these warnings, cautions, and notices could result in personal injury, damage to the vessel or device, or poor product performance.

Failure to install this device according to these instructions could result in personal injury, damage to the vessel or device, or poor product performance.

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

CAUTION

For the best possible performance and to avoid potential injury, damage to the device, or damage to your vessel, installation by a qualified marine installer is recommended.

To avoid possible personal injury, always wear safety goggles, ear protection, and a dust mask when drilling, cutting, or sanding.

To avoid possible personal injury or damage to the device and vessel, disconnect the vessel's power supply before beginning to install the device.

To avoid possible personal injury or damage to the device or vessel, before applying power to the device, make sure that it has been properly grounded, following the instructions in this guide.

To avoid possible personal injury or damage to this device and vessel, only install this device when the vessel is on land, or when properly secured and docked in calm water conditions.

NOTICE

When drilling or cutting, always check what is on the opposite side of the surface to avoid damaging the vessel.

Read all installation instructions before proceeding with the installation. If you experience difficulty during the installation, contact Garmin® Product Support.

Software Update

NOTICE

Failure to regularly update the software on your chartplotter and connected devices may result in poor product performance.

Garmin® releases software updates for chartplotters and other marine devices on a regular basis. These software updates provide support for new products, software improvements, or product performance

enhancements. You should update the software after installation is complete and regularly life of the product for the best performance. For information on the latest available software, go to garmin.com/support/software/marine. For the instructions on how to update the software, see the chartplotter owner's manual at garmin.com/manuals/GPSMAP9000.

Tools Needed

- Drill and drill bits
 - 3.2 mm ($\frac{1}{8}$ in.) drill bit, if using wood screws
 - 3.6 mm ($\frac{9}{64}$ in.) drill bit, if using the nut plate
 - 6 mm ($\frac{1}{4}$ in.) drill bit, if using the nut plate
- #2 Phillips screwdriver
- Jigsaw or rotary tool
- File and sandpaper
- Marine sealant (recommended)

Mounting Considerations

NOTICE

This device should be mounted in a location that is not exposed to extreme temperatures or conditions. The temperature range for this device is listed in the product specifications. Extended exposure to temperatures exceeding the specified temperature range, in storage or operating conditions, may cause device failure. Extreme-temperature-induced damage and related consequences are not covered by the warranty.

Using the included hardware and template, you can flush mount the chartplotter in the dashboard.

When selecting a mounting location, observe these considerations.

- You should mount the chartplotter to provide an optimal viewing angle as you operate your boat.
- You must select a location that is strong enough to support the weight of the chartplotter and protect it from excessive vibration or shock.
- You should select a location that allows for easy access to all interfaces, such as the keypad, touchscreen, and card reader, if applicable.
- To avoid interference with a magnetic compass, you must not mount the chartplotter closer to a compass than the compass-safe distance value listed in the product specifications.
- You must select a location that allows room for the routing and connection of all cables.
- If the mounting location is in direct sunlight and in a horizontal orientation, ensure that the installation location meets as many of the following criteria as possible:
 - Sufficient air flow
 - Proper ventilation
 - Cooling source on the front and rear of the chartplotter
 - Method to shade the display using a canopy, window tint, or shroud

NOTE: If possible, you should meet all of these criteria when installing the chartplotter.


Bail Mounting the Device

NOTICE

If you are mounting the bracket on fiberglass with screws, it is recommended to use a countersink bit to drill a clearance counterbore through only the top gel-coat layer. This will help to avoid cracking in the gel-coat layer when the screws are tightened.

You can use the bracket to bail mount the device on a flat surface.

- 1 Using the bail-mount bracket ① as a template, mark the pilot holes ②.

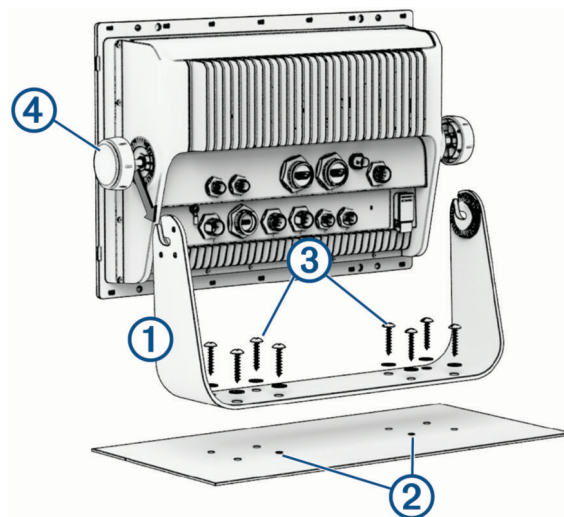

- 2 Using a 3.2 mm ($\frac{1}{8}$ in.) drill bit, drill the pilot holes.
- 3 Secure the bail-mount bracket to the surface using the included washers and wood screws ③.
- 4 Install the bail-mount knobs ④ on the sides of the device.
- 5 Place the device in the bail-mount bracket, and tighten the bail-mount knobs.
- 6 Install the trim caps by snapping them in place around the edges of the device.

Flush Mounting the Device

NOTICE

Be careful when cutting the hole to flush mount the device. There is only a small amount of clearance between the case and the mounting holes, and cutting the hole too large could compromise the stability of the device after it is mounted.

Use only the included hardware when mounting this device. Using mounting hardware not provided with the device may damage the device.

To avoid potential damage to the powder coating, use only the included screws to mount the device. Using screws other than the ones included will void your warranty.

Do not remove the blue, rubber protective bumper until after the installation is complete. The bumper helps protect the device from damage during installation.

If you will not have access to the back of the device and the microSD® memory card slots after installation, you should install the microSD memory card prior to installation.

The included template and hardware can be used to flush mount the device in your dashboard. There are three options for hardware based on the mounting surface material.


- You can drill pilot holes and use the included wood screws.
- You can drill holes and use the included nut plates and machine screws. The nut plates can add stability to a thinner surface.
- You can drill holes, tap them to M4, and use the included machine screws.

- 1 Trim the template and make sure it fits in the location where you want to mount the device.
- 2 Secure the template to the selected location.
- 3 Using an 14.6 mm ($\frac{9}{16}$ in.) drill bit, drill one or more of the holes inside the corners of the solid line on the template to prepare the mounting surface for cutting.
- 4 Using a jigsaw or rotary tool, cut the mounting surface along the **inside** of the solid line on the template.
- 5 Place the device in the cutout to test the fit.
- 6 If necessary, use a file and sandpaper to refine the size of the cutout.
- 7 After the device fits correctly in the cutout, ensure the mounting holes on the device line up with the larger 6 mm ($\frac{1}{4}$ in.) holes on the template.
- 8 If the mounting holes on the device do not line up, mark the new hole locations.
- 9 Based on your mounting surface, drill or punch and tap the larger holes:


- Drill 3.2 mm ($\frac{1}{8}$ in.) pilot holes for the included wood screws, and skip to step 18.
- Drill 6 mm ($\frac{1}{4}$ in.) holes for the included nut plate and machine screws.
- Drill and tap M4 holes for the included machine screws, and skip to step 18.

- 10** If using the nut plates, starting in one corner of the template, place a nut plate ① over the larger hole ② drilled in step 9.

The smaller hole ③ on the nut plate should line up with the smaller 3.6 mm ($\frac{9}{64}$ in.) hole on the template.

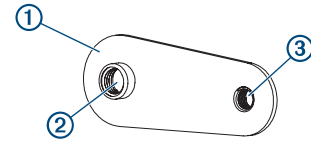

- 11** If the smaller hole on the nut plate does not line up with the smaller hole on the template, mark the new hole location.
- 12** Repeat steps 10 and 11 for each nut plate.
- 13** Using a 3.6 mm ($\frac{9}{64}$ in.) drill bit, drill the smaller holes.
- 14** Remove the template from the mounting surface.
- 15** Starting in one corner of the mounting location, place a nut plate ④ on the back of the mounting surface, lining up the large and small holes.
- The raised portion of the nut plate should fit into the larger hole.

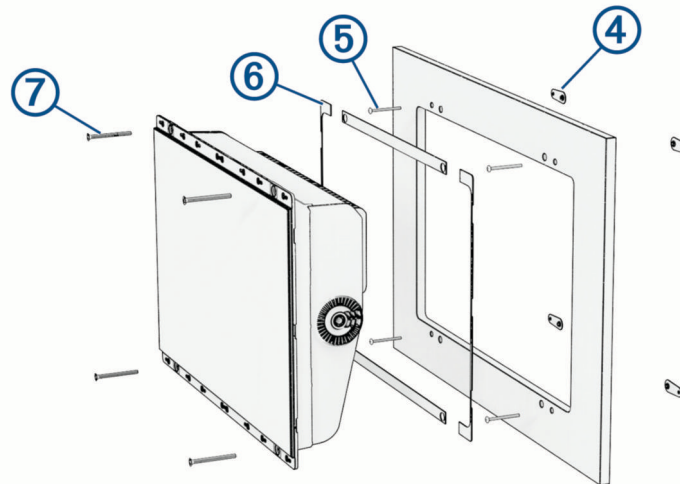

- 16** Secure the nut plate to the mounting surface by fastening an included M3 screw ⑤ through the smaller 3.6 mm ($\frac{9}{64}$ in.) hole.
- 17** Repeat steps 15 and 16 for each of the nut plates along the top and bottom of the device.
- 18** Install the foam gasket ⑥ on the back of the device.
- The pieces of the foam gasket have adhesive on the back. Make sure you remove the protective liner before installing them on the device.
- 19** If you will not have access to the back of the device after you mount it, connect all necessary cables and install microSD cards in the back of the device before placing it into the cutout.
- To prevent corrosion of the metal contacts, cover unused connectors with the attached weather caps.
- 20** Apply marine sealant between the mounting surface and the device to properly seal and prevent leakage behind the dashboard.
- 21** If you will have access to the back of the device, apply marine sealant around the cutout.
- 22** Place the device into the cutout.
- 23** Secure the device to the mounting surface using the included M4 screws ⑦ or wood screws, depending on the mounting method.
- 24** Carefully remove and discard the rubber protective bumper.
- 25** Wipe away all excess marine sealant.
- 26** Install the trim caps by snapping them in place over the screws.

Connection Considerations

When connecting this device to power and to other Garmin® devices, you should observe these considerations.

- The power and ground connections to the battery must be checked to make sure they are secured and cannot become loose.
- The cables may be packaged without the locking rings installed. The cables should be routed before the locking rings are installed.
- After installing a locking ring on a cable, you should make sure the ring is securely connected and the o-ring is in place so the power or data connection remains secure.

Connector View

The connectors and locations are the same across all of the GPSMAP® 9000xsv series models. A GPSMAP 9x13xsv model is shown below.



①	Two internal card readers. Each supports up to a 1 TB microSD® memory card, formatted to exFAT with speed class 10 or higher.
POWER	Power
NETWORK	Garmin BlueNet™ network ports (Garmin BlueNet™ Network Considerations, page 7)
HDMI IN	HDMI® input compatible with HDMI devices up to 4K at 60 fps
HDMI OUT	HDMI out
USB DRD	Dual-Role-Data (DRD) USB-C® that can be configured as either a host or a client.
AUDIO	NMEA® 0183 and audio out
CVBS IN	Composite video in
NMEA 2000	NMEA 2000® network
8-PIN XDCR	8-pin transducer
12-PIN XDCR	12-pin transducer
J1939	J1939 network

Connecting to Power

⚠ WARNING


When connecting the power cable, do not remove the inline fuse holder. To prevent the possibility of personal injury or product damage caused by fire or overheating, the appropriate fuse must be in place as indicated in the product specifications. Connecting the power cable without the appropriate fuse in place voids the product warranty.

You should connect the red wire to the power source through the ignition or another manual switch to turn the device on and off.

- 1 Route the power cable to the power source.
If necessary, you can extend the power cable ([Power Cable Extensions](#), page 6).
- 2 Connect the red power wire to the ignition or another manual switch, and connect the switch to the positive (+) battery terminal if necessary.
- 3 Connect the black wire to the negative (-) battery terminal or to ground.


Additional Grounding Consideration

This device should not need additional chassis grounding in most installation situations. If you experience interference, you can use the grounding screw on the housing to connect the device to the water ground of the boat to help avoid the interference.

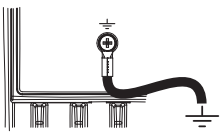

Power Cable Extensions

If necessary, the power cable can be extended using the appropriate wire gauge for the length of the extension.

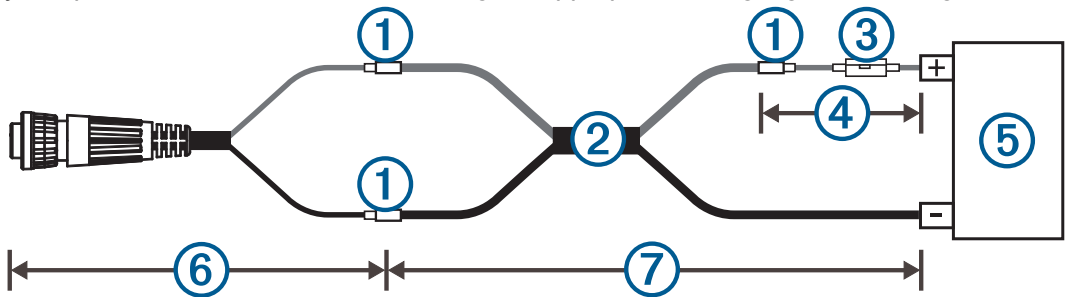

①	Splice
②	• Up to 4.6 m (15 ft.): 10 AWG (5.26 mm²) extension wire • Up to 7 m (23 ft.): 8 AWG (8.36 mm²) extension wire • Up to 11 m (36 ft.): 6 AWG (13.29 mm²) extension wire
③	Fuse (10 A)
④	20.3 cm (8 in.)
⑤	Battery
⑥	20.3 cm (8 in.)
⑦	11 m (36 ft.) maximum extension

Station Connection Considerations

This device can be set up in conjunction with other compatible Garmin® devices to work together as a station. When planning stations on your boat, observe these considerations.

- Devices earlier than the GPSMAP® 8000 series and GPSMAP 8500 series cannot be used in a station.
- Although it is not necessary, it is recommended that you install all of the devices you plan to use in one station near each other.
- All of the devices you plan to use in stations must be connected to the Garmin BlueNet™ network ([Garmin BlueNet™ Network Considerations](#), page 7). No additional, special connections are necessary.

- Stations are created and modified using the device software. See the device owner's manual for more information.

Garmin BlueNet™ Network Considerations

This device can connect to additional Garmin® devices to share data such as radar, sonar, and detailed mapping using Garmin BlueNet technology. For more information about Garmin BlueNet technology, including best practices for properly constructing a network that contains both Garmin BlueNet devices and legacy Garmin Marine Network devices, go to garmin.com/manuals/bluenet.

When connecting Garmin BlueNet devices and legacy Garmin Marine Network devices to this device, observe these considerations.

- The NETWORK ports on the device each act as a Garmin BlueNet network switch. Any Garmin BlueNet device can connect to any NETWORK port to share data with all devices on the boat connected by a Garmin BlueNet cable.
- You can connect legacy Garmin Marine Network devices to this device if you install a Garmin BlueNet 30 gateway.
- All devices connected to the Garmin BlueNet network must be connected to the same ground. If multiple power sources are used for Garmin BlueNet network devices, you must tie all ground connections from all power supplies together using a low resistance connection or tie them to a common ground bus bar, if available.
- You must use a Garmin BlueNet network cable for all Garmin BlueNet network connections.
 - You must not use third-party CAT5 cable and RJ45 connectors for Garmin BlueNet network connections.
 - Additional Garmin BlueNet cables and connectors are available from your Garmin dealer or from garmin.com.

NMEA 2000® Considerations

NOTICE

If you are connecting to an **existing** NMEA 2000 network, identify the NMEA 2000 power cable. Only one NMEA 2000 power cable is required for the NMEA 2000 network to operate properly.

A NMEA 2000 Power Isolator (010-11580-00) should be used in installations where the existing NMEA 2000 network manufacturer is unknown.


If you are installing a NMEA 2000 power cable, you must connect it to the boat ignition switch or through another in-line switch. NMEA 2000 devices will drain your battery if the NMEA 2000 power cable is connected to the battery directly.

This device can connect to a NMEA 2000 network on your boat to share data from NMEA 2000 compatible devices such as a GPS antenna or a VHF radio. The included NMEA 2000 cables and connectors allow you to connect the device to your existing NMEA 2000 network. If you do not have an existing NMEA 2000 network you can create a basic one using cables from Garmin®.

This device is not powered through the NMEA 2000 network. You must connect the device to a power source ([Connecting to Power](#), page 6).

If you are unfamiliar with NMEA 2000, you should read the *Technical Reference for NMEA 2000 Products* at garmin.com/manuals/nmea_2000.

The port labeled NMEA 2000 is used to connect the device to a standard NMEA 2000 network.

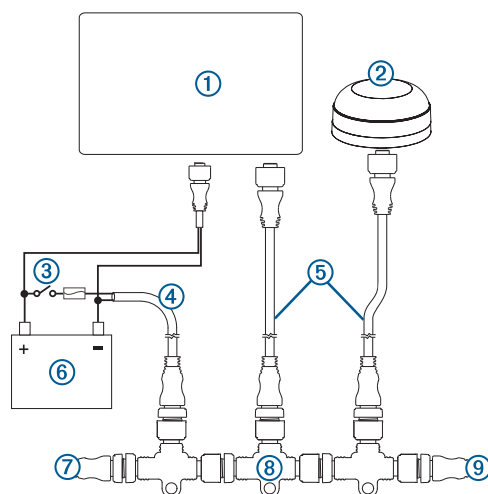

Item	Description
①	NMEA 2000 compatible Garmin device
②	GPS antenna
③	Ignition or in-line switch
④	NMEA 2000 power cable
⑤	NMEA 2000 drop cable
⑥	12 Vdc power source
⑦	NMEA 2000 terminator or backbone cable
⑧	NMEA 2000 T-connector
⑨	NMEA 2000 terminator or backbone cable

NMEA® 0183 Connection Considerations


- The chartplotter provides one Tx (transmit) port and one Rx (receive) port.
- Each port has 2 wires, labeled A and B according to the NMEA 0183 convention. The corresponding A and B wires of each internal port should be connected to the A (+) and B (-) wires of the NMEA 0183 device.
- You can connect one NMEA 0183 device to the Rx port to input data to this chartplotter, and you can connect up to three NMEA 0183 devices in parallel to the Tx port to receive data output by this chartplotter.
- See the NMEA 0183 device installation instructions to identify the transmit (Tx) and receive (Rx) wires.
- You must use 28 AWG (0.08 mm²), shielded, twisted-pair wiring for extended runs of wire. Solder all connections and seal them with heat-shrink tubing.
- Unless instructed for specific installation types, you should not connect the NMEA 0183 data wires from this device to power ground.
- The power cable from the chartplotter and the NMEA 0183 devices must be connected to a common power ground.
- The internal NMEA 0183 ports and communication protocols are configured on the chartplotter. See the NMEA 0183 section of the chartplotter owner's manual for more information.
- See the chartplotter owner's manual for a list of the approved NMEA 0183 sentences that the chartplotter supports.

NMEA® 0183 with Audio Cable Pinout

The optional NMEA 0183 with audio cable (010-12852-00) includes bare wires and an RCA connector for an audio out connection to a stereo, including Fusion® stereos. This cable can be purchased from garmin.com or your local Garmin® dealer.

You can connect the RCA connector to the AUX input of the stereo. Audio received from the HDMI® input to the chartplotter is output to the stereo.


The NMEA 0183 with audio cable provides one differential NMEA 0183 input and output port.

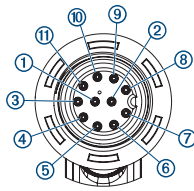

Pin	Wire Function	Wire Color
①	NMEA 0183 Rx/A (In +)	White/orange
②	NMEA 0183 Rx/B (In -)	White
③	NMEA 0183 Tx/B (Out -)	Pink
④	NMEA 0183 Tx/A (Out +)	Gray
⑤	Ground	Black
⑥	Alarm	Yellow
⑦	Accessory on	Orange
⑧	Ground (shield)	Brown
⑨	Audio Left Channel	White
⑩	Audio Common	Blue/red
⑪	Audio Right Channel	Red

NMEA® 0183 Device Connections

This diagram illustrates two-way connections for both sending and receiving data. You can also use this diagram for one-way communication. To receive information from a NMEA 0183 device, refer to items ①, ②, ③, ④, and ⑤ when connecting the Garmin® device. To transmit information to a NMEA 0183 device, refer to items ①, ②, ③, ⑥, and ⑦ when connecting the Garmin device.

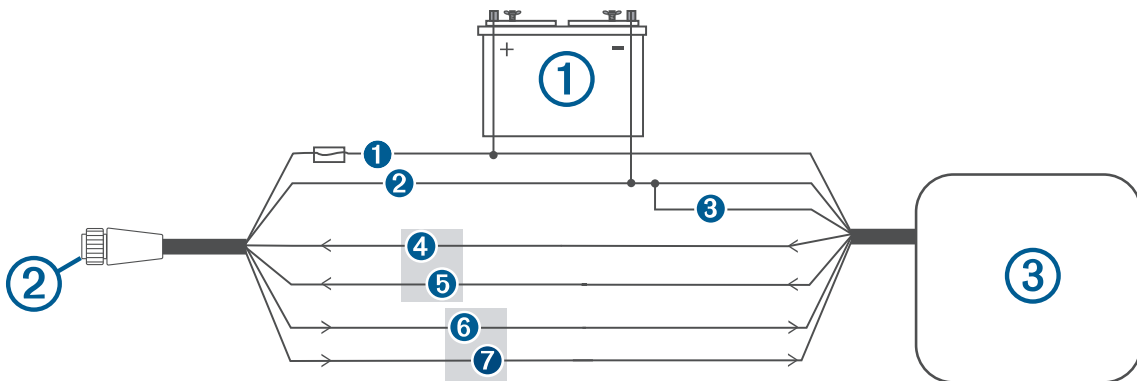

Item	Description
①	Power source
②	Power/NMEA 0183 cable
③	NMEA 0183 device

Item	Garmin Wire Function	Garmin Wire Color	NMEA 0183 Device Wire Function
①	Power	Red	Power
②	Power ground	Black	Power ground

Item	Garmin Wire Function	Garmin Wire Color	NMEA 0183 Device Wire Function
3	Data ground	Black	Data ground
4	Rx/A (In +)	Brown	Tx/A (Out +)
5	Rx/B (In -)	Violet	Tx/B (Out -)
6	Tx/A (Out +)	Blue	Rx/A (In +)
7	Tx/B (Out -)	Gray	Rx/B (In -)


If the NMEA 0183 device has only one input (receive, Rx) wire (no A, B, +, or -), you must leave the gray wire unconnected.

If the NMEA 0183 device has only one output (transmit, Tx) wire (no A, B, +, or -), you must connect the violet wire to ground.

Lamp or Horn Connections

The device can be used with a lamp, a horn, or both, to sound or flash an alert when the chartplotter displays a message. This is optional, and the alarm wire is not necessary for the device to function normally. When connecting the device to a lamp or horn, observe these considerations.

- The alarm circuit switches to a low-voltage state when the alarm sounds.
- The maximum current is 100 mA, and a relay is needed to limit the current from the chartplotter to 100 mA.
- To toggle visual and audible alerts manually, you can install single-pole, single-throw switches.

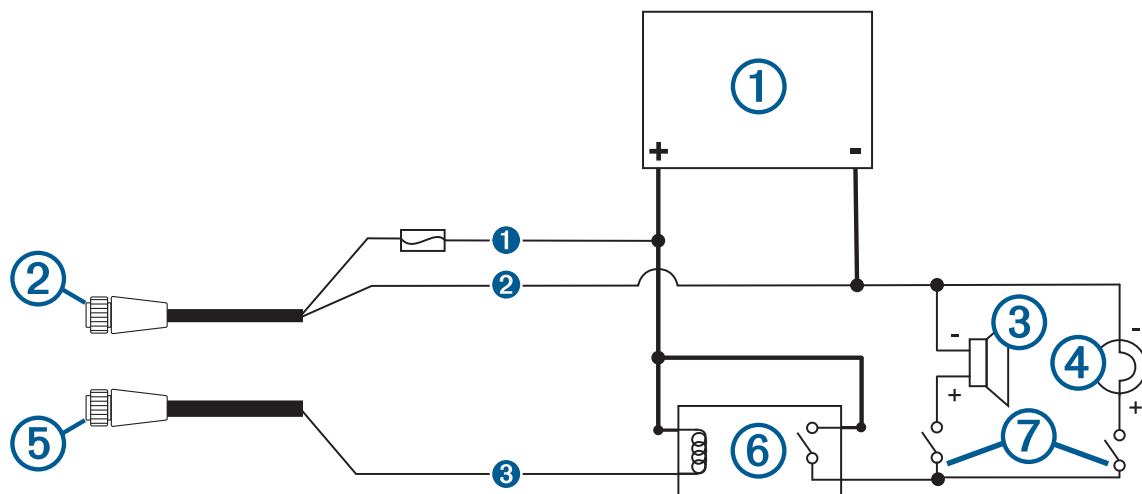

Item	Description
1	Power source
2	Power cable
3	Horn
4	Lamp
5	NMEA® 0183 cable
6	Relay (100 mA coil current)
7	Toggle switches to enable and disable lamp or horn alerts

Item	Wire Color	Wire Function
1	Red	Power
2	Black	Ground
3	Yellow	Alarm

J1939 Engine Network Connection Considerations

NOTICE

You must use a Garmin® GPSMAP® J1939 accessory cable when connecting the chartplotter to the J1939 engine network to prevent corrosion due to moisture. Using a different cable voids your warranty.


If you have an existing engine network on your boat, it should already be connected to power. Do not add any additional power supply.

This chartplotter can connect to an engine network on your boat to read data from compatible devices such as certain engines. The engine network follows a standard and uses proprietary messages.

You should consult the manufacturer of your engine or engine network when connecting the chartplotter. Some manufacturers may have requirements you must follow when connecting to avoid unexpected behavior.

The port labeled J1939 is used to connect the device to the existing engine network. You must route the cable within 6 m (20 ft.) of the engine network backbone.

The Garmin GPSMAP J1939 accessory cable requires connection to a power source and proper termination. For more information on connecting to your engine network, see the manufacturer's engine documentation.

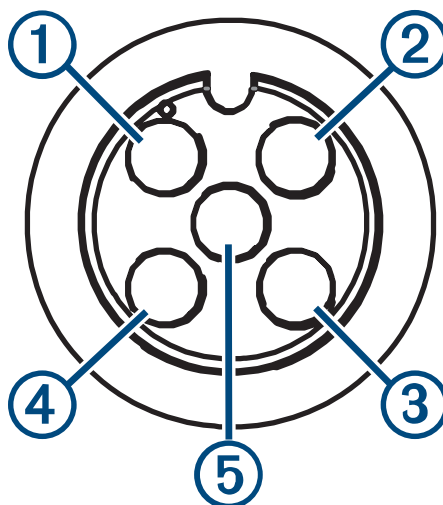

Pin	Wire Color	Description
1	Bare	Shield
2	Red	Power, positive
3	Black	Power, negative
4	White	CAN High
5	Blue	CAN Low

HDMI® Video Considerations

NOTICE

To prevent corrosion due to moisture, you must use Garmin® GPSMAP® accessory cables when connecting the chartplotter to the video source or display. Do not connect a media player stick directly into the back of the chartplotter. Using different cables or connecting a media player stick into the back of the chartplotter voids your warranty.

This chartplotter allows video input from HDMI video sources, such as a Chromecast™ device or a Blu-Ray™ player. You can view protected HDMI content (HDCP content) on the chartplotter screen, but are limited with how you can view that content on additional devices.


Through the HDMI OUT port, you can display the chartplotter on an external screen, such as a television or monitor. You can view HDCP content on an external monitor that supports industry HDCP standards.

HDMI video is shared across the Garmin BlueNet™ network and across the Garmin Marine Network, but it is not shared across the NMEA 2000® network. HDCP content cannot be shared across the Garmin network to GPSMAP 8000 series or older chartplotters. HDCP content can be shared by a GPSMAP 9000 series chartplotter only to other GPSMAP 9000 series chartplotters connected to the Garmin BlueNet network.

The Garmin GPSMAP HDMI accessory cable is 4.5 m (15 ft) long. If you need a longer cable, you should use an active HDMI cable only. You need an HDMI coupler to connect the two HDMI cables.

You can use an adapter cable to power a media player stick using a USB port on the chartplotter. The USB DRD port can supply up to 2.5 W to power a media player stick. The USB port can supply up to 4.5 W to power a media player stick

You must make all cable connections in a dry environment.

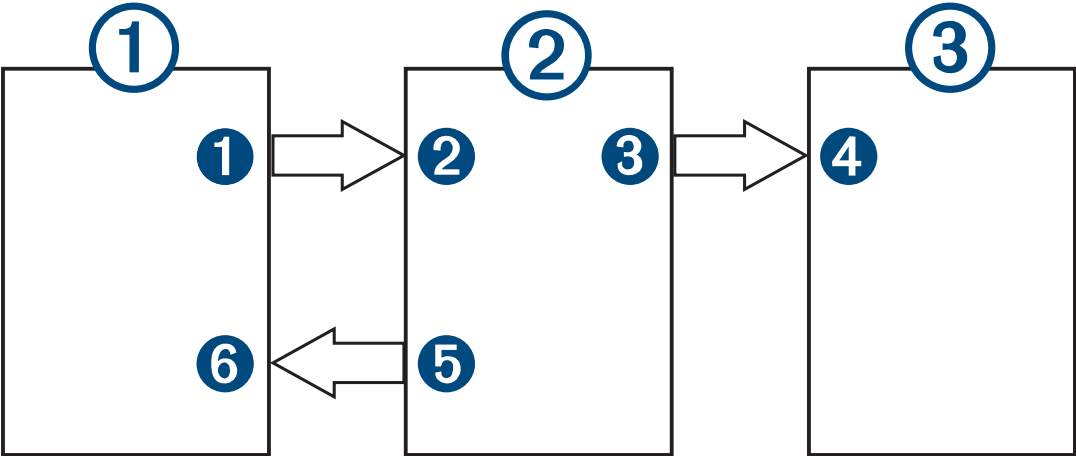

Devices

Item	Device
①	HDMI source, such as a Chromecast device
②	GPSMAP chartplotter
③	Monitor, such as a computer or television

Connections

From	To	Cable
① HDMI source's HDMI OUT port	② Chartplotter's HDMI IN port	Garmin HDMI Cable
③ Chartplotter's HDMI OUT port	④ Monitor's HDMI IN port	Garmin HDMI Cable
⑤ Chartplotter's USB DRD port	⑥ HDMI source's USB port	Adapter cable to power the HDMI source, if possible. The USB DRD port supplies a maximum output of 2.5 W.

Composite Video Considerations

This chartplotter allows video input from composite video sources using the port labeled CVBS IN. When connecting composite video, you should observe these considerations.

- The CVBS IN port uses a BNC connector. You can use a BNC to RCA adapter to connect a composite-video source with RCA connectors to the CVBS IN port.
- Video is shared across the Garmin® Marine Network, but it is not shared across the NMEA 2000® network.

Touchscreen Controls for a Connected Computer

NOTICE


To prevent corrosion due to moisture, you must use Garmin® GPSMAP® accessory cables when connecting the chartplotter to the computer. Using different cables voids your warranty.

You can connect the chartplotter to a computer to see the computer screen on the chartplotter touchscreen and control the computer using the chartplotter touchscreen. To see the computer screen, you must connect the computer to the HDMI IN port. To control the computer, you must connect the computer to the USB DRD port. The Garmin HDMI® accessory cable (010-12390-20) is 4.5 m (15 ft) long. If you need a longer cable, you should use an active HDMI cable only. You need an HDMI coupler to connect the two HDMI cables. The recommended Garmin USB Cable (010-12390-14) is 4.5 m (15 ft) long. If you need a longer cable, you should use a USB hub or USB repeater extension cable only.

NOTICE

To avoid potential communication errors, you should use the correct USB cable for your chartplotter. You should not use an adapter to change the USB connector type on an older cable.

You must make all cable connections in a dry environment.

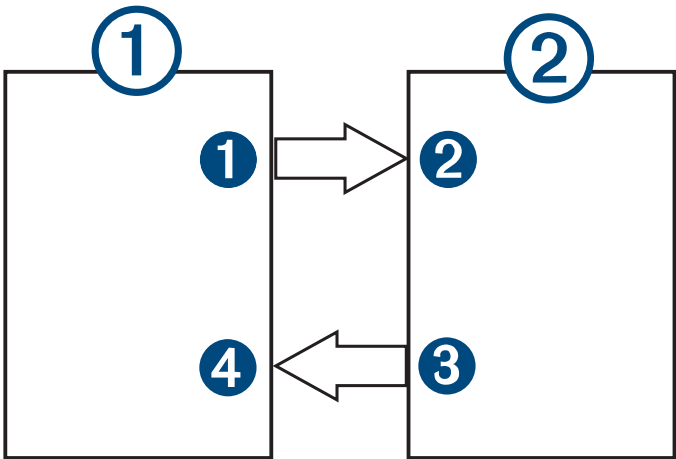

Devices

Item	Device
①	Computer
②	GPSMAP chartplotter

Connections

From	To	Cable
① Computer's HDMI OUT port	② Chartplotter's HDMI IN port	Garmin HDMI Cable (010-12390-20)
③ Chartplotter's USB DRD port	④ Computer's USB port	Garmin USB-C to USB-A Cable (010-12390-14)

Specifications

All models

Material	Polycarbonate plastic and die-cast aluminum
Water rating	IEC 60529 IPX7 ¹
Temperature range	From -15° to 55°C (from 5° to 131°F)

¹ The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to www.garmin.com/waterrating.

Input voltage	From 10 to 32 Vdc
Fuse	10 A
NMEA 2000® LEN @ 9 Vdc	2
NMEA 2000 Draw	70 mA max.
Wireless frequencies and transmit power	2.4 GHz: < 20 dBm 5 150-5 250 MHz: < 23 dBm 5 250-5 850 MHz: < 20 dBm
HTML integration	Compatible with OneHelm™ integration
Max. waypoints	5,000
Max. routes	100
Max. active track points	50,000 points, 50 saved tracks

9x10 Models

Dimensions (W × H × D)	26 × 20 × 9.1 cm (10.24 × 7.87 × 3.54 in.)
Display size (W × H × diagonal)	21.7 × 13.6 × 25.6 cm (8.54 × 5.34 × 10.1 in.)
Weight	2.52 kg (5.55 lb.)
Display resolution	WUXGA, 1920 × 1200 pixels
Max. power usage	45.1 W
Typical current draw at 12 Vdc	3.6 A
Typical current draw at 24 Vdc	1.8 A
Compass-safe distance	40 cm (16 in.)

9x13 Models

Dimensions (W × H × D)	33.5 × 23.4 × 9.1 cm (13.20 × 9.19 × 3.56 in.)
Display size (W × H × diagonal)	29.4 × 16.5 × 33.7 cm (11.57 × 6.50 × 13.27 in.)
Weight	4.13 kg (9.1 lb.)
Display resolution	4KUHD, 3840 × 2160 pixels
Max. power usage	63 W
Typical current draw at 12 Vdc	4.7 A
Typical current draw at 24 Vdc	2.5 A
Compass-safe distance	55 cm (22 in.)

9x17 Models

Dimensions (W × H × D)	42.7 × 28.5 × 9.2 cm (16.80 × 11.23 × 3.60 in.)
Display size (W × H × diagonal)	38.2 × 21.5 × 43.8 cm (15.04 × 8.50 × 17.25 in.)
Weight	5.90 kg (13.0 lb.)
Display resolution	4KUHD, 3840 × 2160 pixels
Max. power usage	67.5 W
Typical current draw at 12 Vdc	5.4 A
Typical current draw at 24 Vdc	2.7 A
Compass-safe distance	50 cm (20 in.)

NMEA 2000® PGN Information

Transmit and Receive

PGN	Description
059392	ISO acknowledgment
059904	ISO request
060160	ISO transport protocol: Data transfer

PGN	Description
060416	ISO transport protocol: Connection management
060928	ISO address claimed
126208	Request group function
126993	Heartbeat
126996	Product information
126998	Configuration information
127237	Heading/track control
127245	Rudder
127250	Vessel heading
127258	Magnetic variance
127488	Engine parameters: Rapid update
127489	Engine parameters: Dynamic
127490	Electric drive status: Dynamic
127491	Electric energy storage status: Dynamic
127493	Transmission parameters: Dynamic
127494	Electric drive information
127495	Electric energy storage information
127505	Fluid level
127508	Battery status
128002	Electric drive status: Rapid update
128003	Electric energy storage status: Rapid update
128259	Speed: Water referenced
128267	Water depth
129025	Position: Rapid update
129026	COG and SOG: Rapid update
129029	GNSS position data
129283	Cross track error
129284	Navigation data
129285	Navigation - route/waypoint information
129539	GNSS DOPs
129540	GNSS satellites in view
130060	Label
130306	Wind data
130310	Environmental parameters (obsolete)
130312	Temperature (obsolete)

Transmit

PGN	Description
126464	Transmit and receive PGN list group function
126984	Alert response
127258	Magnetic variation
127497	Trip parameters: Engine
127502	Switch bank control (DEPRECATED)

Receive

PGN	Description
065030	Generator average basic AC quantities (GAAC)
065240	Commanded address
126983	Alert
126985	Alert text
126987	Alert threshold
126988	Alert value
126992	System time
127233	Man overboard
127237	Heading/track control
127245	Rudder
127251	Rate of turn
127252	Heave
127257	Attitude
127498	Engine parameters: Static
127501	Switch bank status
127503	AC input status (obsolete)
127504	AC output status (obsolete)
127506	DC detailed status
127507	Charger status
127509	Inverter status
128000	Nautical leeway angle
128275	Distance log
128780	Linear actuator
129038	AIS class A position report
129039	AIS class B position report
129040	AIS class B extended position report
129041	AIS Aids to Navigation (AtoN) report
129044	Datum
129285	Navigation: Route, waypoint information
129794	AIS class A static and voyage related data
129798	AIS SAR aircraft position report
129799	Radio frequency/mode/power
129802	AIS safety-related broadcast message
129808	DSC call Information
129809	AIS class B "CS" static data report, part A
129810	AIS class B "CS" static data report, part B
130067	Route and waypoint service: Route, waypoint name and position
130311	Environmental parameters (obsolete)
130313	Humidity
130314	Actual pressure
130316	Temperature: Extended range
130569	Entertainment: Current file and status
130570	Entertainment: Library data file

PGN	Description
130571	Entertainment: Library data group
130573	Entertainment: Supported source data
130574	Entertainment: Supported zone data
130576	Trim tab status
130577	Direction data

NMEA® 0183 Information

Transmit

Sentence	Description
GPAPB	APB: Heading or track controller (autopilot) sentence "B"
GPBOD	BOD: Bearing (origin to destination)
GPBWC	BWC: Bearing and distance to waypoint
GPGGA	GGA: Global positioning system fix data
GPGLL	GLL: Geographic position (latitude and longitude)
GPGSA	GSA: GNSS DOP and active satellites
GPGSV	GSV: GNSS satellites in view
GPRMB	RMB: Recommended minimum navigation information
GPRMC	RMC: Recommended minimum specific GNSS data
GP RTE	RTE: Routes
GPVTG	VTG: Course over ground and ground speed
GPWPL	WPL: Waypoint location
GPXTE	XTE: Cross track error
PGRME	E: Estimated error
PGRMM	M: Map datum
PGRMZ	Z: Altitude
SDDBT	DBT: Depth below transducer
SDDPT	DPT: Depth
SDMTW	MTW: Water temperature
SDVHW	VHW: Water speed and heading
TLB	Target label
TLL	Target latitude and longitude
TTD	Tracked target data
ZDA	Time and date

Receive

Sentence	Description
DPT	Depth
DBT	Depth below transducer
MTW	Water temperature
VHW	Water speed and heading
WPL	Waypoint location
DSC	Digital selective calling information
DSE	Expanded digital selective calling
HDG	Heading, deviation, and variation
HDM	Heading, magnetic

Sentence	Description
MWD	Wind direction and speed
MDA	Meteorological composite
MWV	Wind speed and angle
RTE	Routes
VDM	AIS VHF data-link message

You can purchase complete information about National Marine Electronics Association (NMEA) format and sentences from www.nmea.org.

J1939 Information

The chartplotter can receive J1939 sentences. The chartplotter cannot transmit over the J1939 network.

Description	PGN	SPN
Engine percent load at current speed	61443	92
Engine speed	61444	190
Engine manifold exhaust gas temperature - right manifold	65031	2433
Engine manifold exhaust gas temperature - left manifold	65031	2434
Engine auxiliary coolant	65172	
Active diagnostic trouble codes	65226	
Vehicle distance	65248	
Water in fuel indicator	65279	
Engine wait to start lamp	65252	1081
Engine over speed test	65252	2812
Engine air shutoff command status	65252	2813
Engine alarm output command status	65252	2814
Engine total hours of operation	65253	247
Navigation-based vehicle speed	65256	517
Engine fuel temperature 1	65262	174
Engine oil temperature 1	65262	175
Engine fuel delivery pressure	65263	94
Engine oil pressure	65263	100
Engine coolant pressure	65263	109
Engine coolant temperature	65263	110
Engine coolant level	65263	111
Engine fuel rate	65266	183
Engine average fuel economy	65266	185
Engine intake manifold #1 pressure	65270	102
Battery potential / power input 1	65271	168
Transmission oil temperature	65272	177
Transmission oil pressure	65272	127
Fuel level	65276	96
Engine oil filter differential pressure	65276	969

物質宣言

部件名称	有毒有害物质或元素									
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚	邻苯二甲酸二(2-乙基己)酯	邻苯二甲酸丁苄酯	邻苯二甲酸二丁酯	邻苯二甲酸二异丁酯

印刷电路板组件	×	○	○	○	○	○	○	○	○	○
屏幕/背光	×	○	○	○	○	○	○	○	○	○
金属零件	×	○	○	○	○	○	○	○	○	○
电缆 电缆组件 连接器	×	○	○	○	○	○	○	○	○	○
塑料和橡胶零件	○	○	○	○	○	○	○	○	○	○

本表格依据 SJ/T11364 的规定编制。

○: 代表此种部件的所有均质材料中所含的该种有害物质均低于 (GB/T26572) 规定的限量

×: 代表此种部件所用的均质材料中, 至少有一类材料其所含的有害物质高于 (GB/T26572) 规定的限量

* 该产品说明书应提供在环保使用期限和特殊标记的部分详细讲解产品的担保使用条件。



中国微功率无线电发射设备合规

一) 工作于 2402-2480 MHz 频段的 ANT 技术无线遥控设备, 使用频率: 2402-2480 MHz, 发射功率限值: 10 dBm(e.i.r.p), 频率容限: +/- 20 ppm

二) 不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率(包括额外加装射频功率放大器), 不得擅自更改发射天线;

三) 不得对其他合法的无线电台(站)产生有害干扰, 也不得提出免受有害干扰保护;

四) 应当承受辐射射频能量的工业、科学及医疗(ISM)应用设备的干扰或其他合法的无线电台(站)干扰;

五) 如对其他合法的无线电台(站)产生有害干扰时, 应立即停止使用, 并采取措施消除干扰后方可继续使用;

六) 在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫星地球站(含测控、测距、接收、导航站)等军民用无线电台(站)、机场等的电磁环境保护区域内使用微功率设备, 应当遵守电磁环境保护及相关行业主管部门的规定;

七) 禁止在以机场跑道中心点为圆心、半径 5000 米的区域内使用各类模型遥控器;

八) 微功率设备使用时温度 -10-55°C 直流电压 10-35 Vdc。

联系信息

制造厂商: 台湾国际航电股份有限公司

销售厂商: 上海佳明航电企业管理有限公司

联络地址: 上海市徐汇区桂平路 391 号(新漕河泾国际商务中心 A 座 37 层)

电话: 021-60737675

客服专线: 400-819-1899

NBTC SDoC



© 2025 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo, and GPSMAP® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin BlueNet™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

HDMI® is a registered trademark of HDMI Licensing, LLC. The microSD® logo is a trademark of SD-3C, LLC. NMEA®, NMEA 2000®, and the NMEA 2000 logo are registered trademarks of the National Marine Electronics Association. USB-C® is a registered trademark of USB Implementers Forum.

M/N: A04946 / B04946 / C04946

